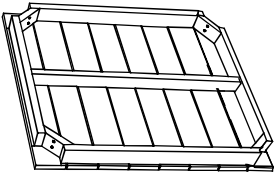


dareels


PRODUCT NAME/
GENESIS Outdoor dining table

ASSEMBLY INSTRUCTIONS

- ☐ Read all the explanations before assembling.
- ☐ Do not throw away the packing material before the assembling process is done.
- ☐ Assembly by two or more adults is recommended.


COMPONENTS AND PARTS LIST			Quantity
(A)	TOP		x 1
(B)	LEG		x 4
(1)	HEX NUT		x 8
(2)	SPRING WASHER		x 8
(3)	FLAT WASHER		x 8
(4)	SPANNER WRENCH		x 1

Complete Assembly Picture

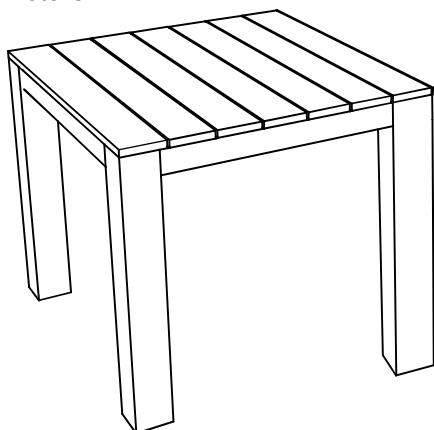

HOW TO ASSEMBLY

- 1 Place the unit upside down as shown below

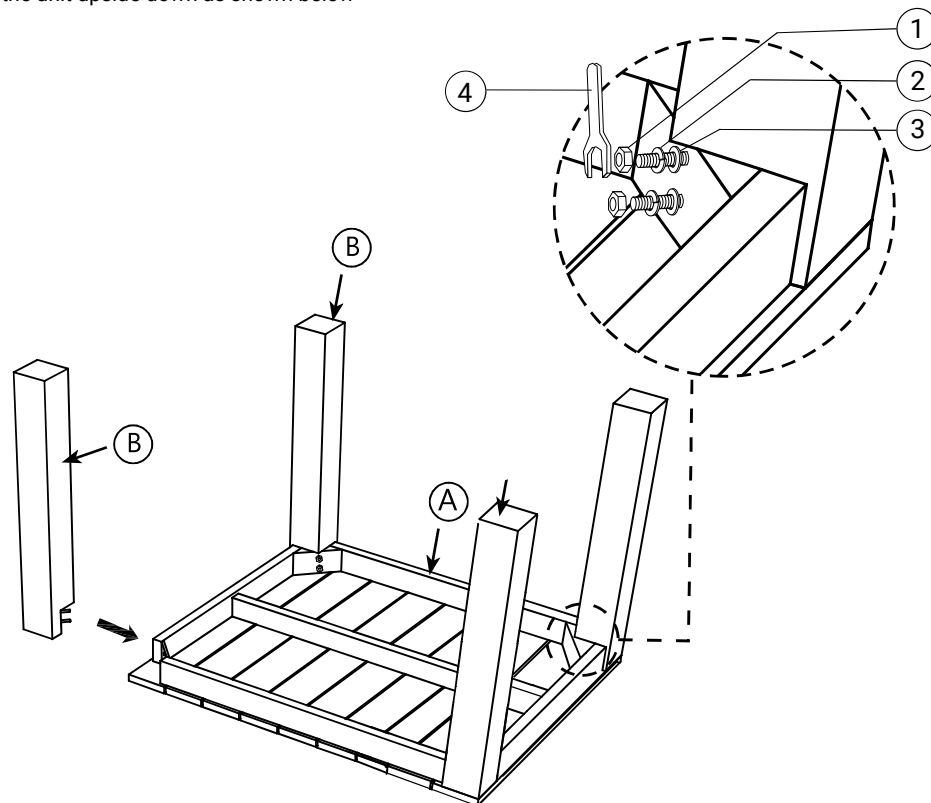

- 2 Attach bolts and secure with a hex wrench.



- ☐ When placing the body on the floor for the assembly, make sure that there is nothing on the floor. Spread out some papers (e.g. newspaper) for covering the floor to avoid scratches on the surface of the body.
- ☐ There is a possibility of accident and damage if you raise the product by the edge of the leg as center point, so please lift and then raise it up.
- ☐ When moving the product, please lift and move it without pulling.
- ☐ Because the product is quite heavy, please be careful when raising or moving the product