
dareels

ASSEMBLY INSTRUCTIONS

A step-by-step guide to assembling your product

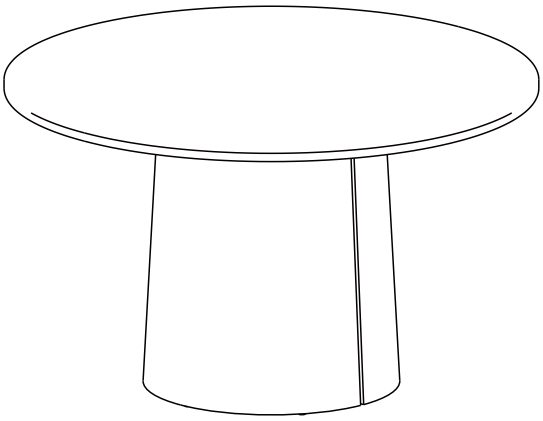

Concrete Dining Table Ø125 cm


Hardware



JCBC SCREW
M6x20
(4pcs)



WASHER
M6x18
(4pcs)

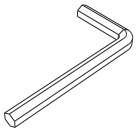


ALLEN KEY

Symbol




DIRECTION



NUMBER OF
PERSONS NEEDED





USE HAND

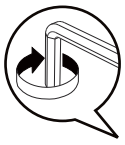

USE ALLEN KEY
TO TIGHTEN

Notice

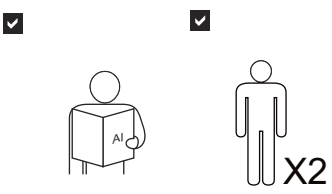

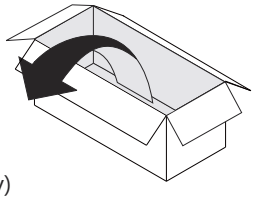


IN YOUR PACKAGE :


Documents
· Assembly Instructions (1 copy)

Hardware
· JCBC screw M6x20 (4 pcs)
· Washer M6x18 (4 pcs)
· Allen key


Item
A. Top panel (1 pc)
B. Leg (1 pc)

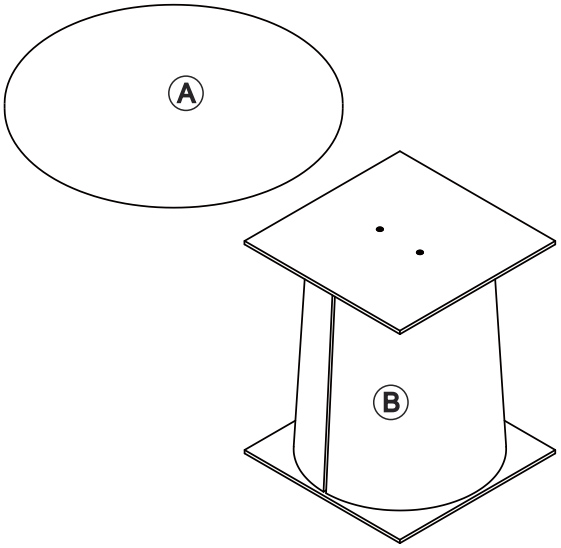


A REMOVING THE INNER SKID

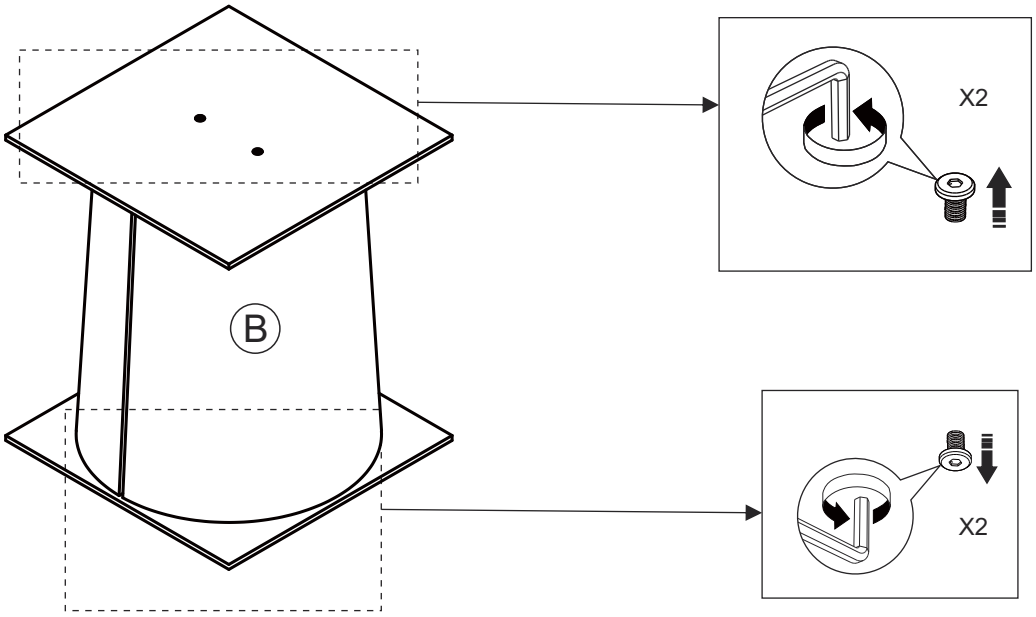


B ATTACHING LEG TO TOP PANEL

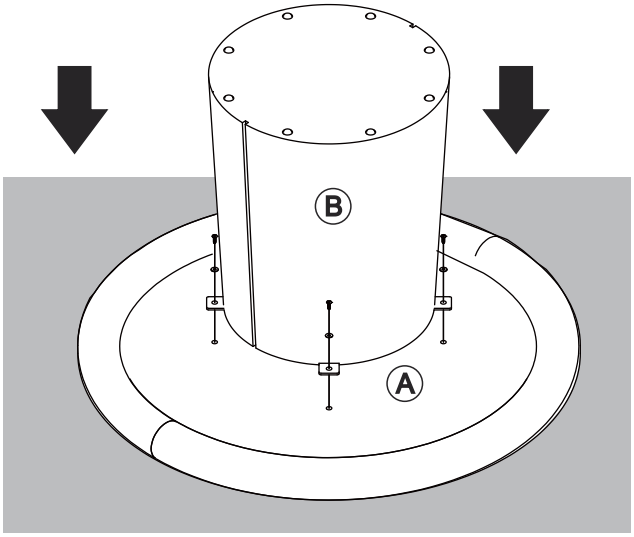



- To prevent damage, remove contents and lay out on carpet, the packaging carton, or other protective surface.
- Keep the PE foam in place during process to protect the edges from damage.

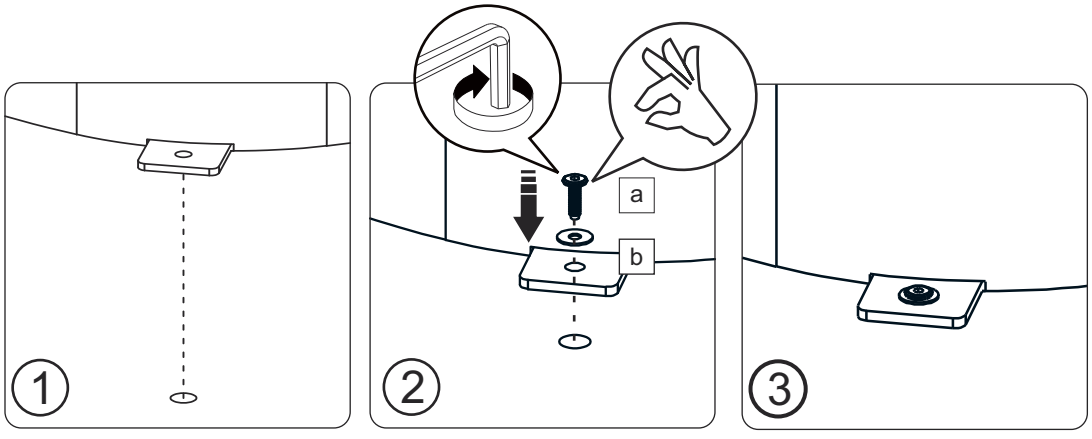

C ADJUSTING THE GLIDES

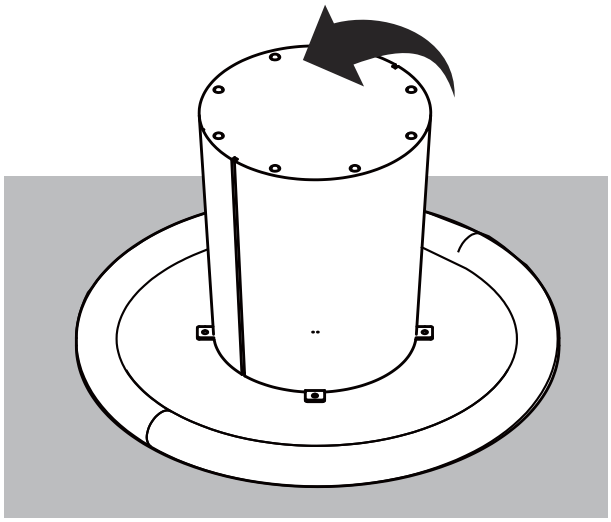

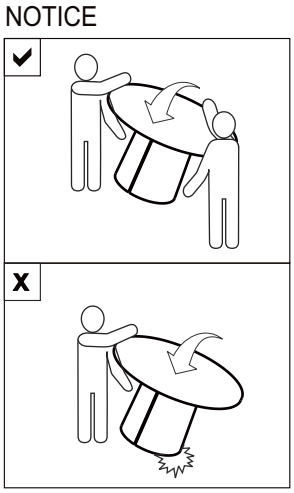

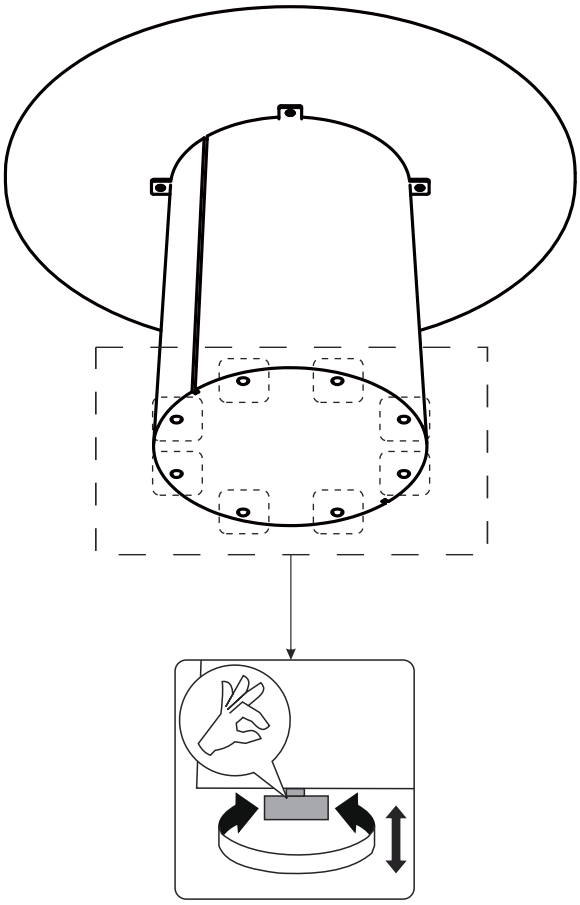

Important Notes

- To prevent warping, always adjust the leg's adjustable glides to match the ground surface before using the item.
- Hardware may loosen over time. Periodically check to ensure that all connections remain tight and secure.

